





Schurter

CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S


Karolo ea Karolo:	CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S
Moetsi / Mochini:	Schurter
Tlhaloso ea Sehlahisoa	SWITCH PUSHBUTTON SPST 100MA 42V
Datasheets:	 CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S.pdf
Boemo ba RoHs	 Tataiso ea mahala / RoHS e lumellanang
Sekepe se Tsoang ho	Hong Kong
Tsela ea Shipment	DHL/Fedex/TNT/UPS/EMS

KOPO EA HO

QOTSA

Setšoantšo e kanna ea ba moemeli. Bona litlhaloso bakeng sa lintlha tsa sehlahisoa.







 
 




Litlhaloso tsa CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S

KAROLO EA KAROLO	CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S
MOETSI	Schurter
TLHALOSO	SWITCH PUSHBUTTON SPST 100MA 42V
TEMO EA MAHALA EA BOEMO BO PHAHAMENG / BOEMO BA ROHS	Tataiso ea mahala / RoHS e lumellanang
LEQEPHE LA LINTLHA	 CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S.pdf
VOLTAGE RATING - DC	60V
VOLTAGE RATING - AC	42V
THAPA	Capacitive, Illuminated
TSELA EA HO KHAOTSA	Wire Leads
FETOLA MOSEBETSI	Off-On
SEHLOOHO	CPS
PANEL DIMENSION DIMENSIONS	Circular - 19.10mm Dia
PACKAGING	Bulk
MOCHESO O SEBETSANG	-40°C ~ 60°C
MOFUTA OA HO THABA	Panel Mount, Front
MOKHOA OA HO UTLOISISA BOHLOKO (MSL)	1 (Unlimited)
MECHANICAL LIFE	-
TEMO EA MAHALA EA BOEMO BO PHAHAMENG / BOEMO BA ROHS	Lead free / RoHS Compliant
TSHIRELETSO EA INGRESS	IP67 - Dust Tight, Waterproof
LESELI LE KHANYANG (LEBITSO LA BOBELI)	5 ~ 28 VDC
MOFUTA OA HO TSAMAEA, MMALA	LED, Yellow/Cyan
LIKAROLOANA	Finger Guide, RESET Symbol
BOPHELO BA MOTLAKASE	-
TLHALOSO E QAQILENG	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
TLHAHLOBO EA HONA JOALE	100mA (AC/DC)
MOBALA - MOTLATSI / CAP	Silver
POTOLOHO	SPST
MOFUTA OA MOFUTHU	Round, Button, Flush

Metsu e amanang

Schurter CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S	Morekisi oa CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S	Mofani oa CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S
Theko ea CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S	CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S Litšoantšo	Setšoantšo sa CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S
Datasheet ea PDF ea CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S	CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S Download Datasheet	Datasheet ea CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S
CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S Stock	Reka CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S	Reka Schurter CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S
Schurter CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S	Mofani oa Schurter	Morekisi oa Schurter
Schurter CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S	Schurter Inc. CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1073-S	

Lihlahisoa tse amanang

 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1076-S</p> <p>Bahlahisi: Schurter Tlhaloso: SWITCH PUSHBUTTON SPST 100MA 42V E teng thepeng e teng ka lebenkeleng: Out stock</p> <p>RFQ</p>	 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1074-S</p> <p>Bahlahisi: Schurter Tlhaloso: SWITCH PUSHBUTTON SPST 100MA 42V E teng thepeng e teng ka lebenkeleng: Out stock</p> <p>RFQ</p>
 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1069-S</p> <p>Bahlahisi: Schurter Tlhaloso: SWITCH PUSHBUTTON SPST 100MA 42V E teng thepeng e teng ka lebenkeleng: Out stock</p> <p>RFQ</p>	 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1067-S</p> <p>Bahlahisi: Schurter Tlhaloso: SWITCH PUSHBUTTON SPST 100MA 42V E teng thepeng e teng ka lebenkeleng: Out stock</p> <p>RFQ</p>
 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1075-S</p> <p>Bahlahisi: Schurter Tlhaloso: SWITCH PUSHBUTTON SPST 100MA 42V E teng thepeng e teng ka lebenkeleng: Out stock</p> <p>RFQ</p>	 <p>CPS19-LA00A10-SNCSNCWF-RI0YGVAR-W0000-S</p> <p>Bahlahisi: Schurter Tlhaloso: SWITCH PUSHBUTTON SPST 100MA 42V E teng thepeng e teng ka lebenkeleng: Out stock</p> <p>RFQ</p>
 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1071-S</p> <p>Bahlahisi: Schurter Tlhaloso: SWITCH PUSHBUTTON SPST 100MA 42V E teng thepeng e teng ka lebenkeleng: Out stock</p> <p>RFQ</p>	 <p>CPS19-LA00A10-SNCSNCWF-RI0YGVAR-W1001-S</p> <p>Bahlahisi: Schurter Tlhaloso: SWITCH PUSHBUTTON SPST 100MA 42V E teng thepeng e teng ka lebenkeleng: Out stock</p> <p>RFQ</p>
 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1068-S</p> <p>Bahlahisi: Schurter Tlhaloso: SWITCH PUSHBUTTON SPST 100MA 42V E teng thepeng e teng ka lebenkeleng: Out stock</p> <p>RFQ</p>	 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1070-S</p> <p>Bahlahisi: Schurter Tlhaloso: SWITCH PUSHBUTTON SPST 100MA 42V E teng thepeng e teng ka lebenkeleng: Out stock</p> <p>RFQ</p>
 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1077-S</p> <p>Bahlahisi: Schurter Tlhaloso: SWITCH PUSHBUTTON SPST 100MA 42V E teng thepeng e teng ka lebenkeleng: Out stock</p> <p>RFQ</p>	 <p>CPS19-LA00A10-SNCSNCWF-RI0YCVAR-W1072-S</p> <p>Bahlahisi: Schurter Tlhaloso: SWITCH PUSHBUTTON SPST 100MA 42V E teng thepeng e teng ka lebenkeleng: Out stock</p> <p>RFQ</p>

